



Open a Lockbox Key Compartment Using Your SentriCard

1. Insert your SentriCard® into the lockbox. **Card** and **Code** will light up on the lockbox.
2. On the lockbox keypad, enter your PIN and press **ENT**. **READY** will light up on the lockbox.
3. Remove your SentriCard.
–OR–
On the lockbox, press **FUNC + 3 + ENT**.
4. The lockbox key compartment will open.