

Release a Lockbox Shackle Using Your SentriCard

1. Insert your SentriCard into the lockbox. You'll hear chirps, and **CARD** and **CODE** will light up on the lockbox.
2. On the lockbox keypad, enter your PIN and press **ENT**. **READY** will light up on the lockbox.
3. On the lockbox keypad, press **Func + 1 + ENT**. You'll hear triple beeps. The lockbox motor will begin turning and the shackle will begin to detach. Hold the lockbox firmly to ensure it doesn't drop to the ground.

Note: When using **Func + 1 + ENT** to release the shackle, wait for the motor to reset itself and the **DND** light to go out before reinserting the shackle into the lockbox.

To reinsert the shackle, firmly press it into the lockbox. The shackle is reversible, so it doesn't matter which way you insert it.

You may have to wiggle it slightly to get it into the lockbox. You'll hear or feel a click that confirms the shackle latch is engaged.