

# Release a Lockbox Shackle Using Your SentriCard Shackle Code

---

This method of releasing the shackle can be used only with the SentriCard.

1. Insert your SentriCard into the lockbox. **CARD** and **CODE** will light up on the lockbox.
2. On the lockbox keypad, enter your PIN and press **ENT**. **READY** will light up on the lockbox.
3. On the lockbox keypad, press **Func + 1 + shackle code + ENT**. The shackle release.