

Assign a Lockbox to a Listing Using Your SentriCard

1. Insert your SentriCard into the lockbox. You'll hear chirps, and **CARD** and **CODE** will light up on the lockbox.
2. On the lockbox keypad, enter your PIN and press **ENT**. **Ready** will light up on the lockbox.
3. On the lockbox keypad, press **FUNC + 2 + MLS number or street address +ENT**. **READY** will light up on the lockbox.

Note: The SentriCard must be renewed from a computer and a card reader afterward in order to update this information.